

WARNING: This Quick Start Guide is not a substitute for reading the operator's manual. To reduce the risk of injury or death, user must read and understand operator's manual before using this product.




QUICK START GUIDE

1500 PSI ELECTRIC PRESSURE WASHER




Model #: 51142

INSTALLING DETERGENT BOTTLE

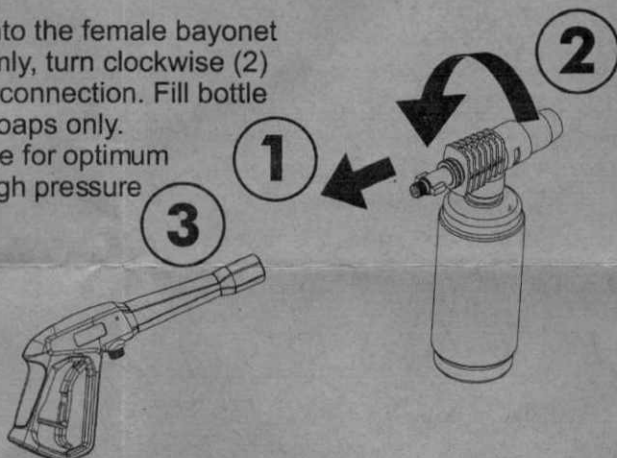
Insert the male bayonet end (1) of the bottle into the female bayonet outlet (3) firmly. While pushing in the bottle firmly, turn clockwise (2) until tabs lock into place to ensure a leak-free connection. Fill bottle with approved pressure washer detergents / soaps only. Soap is applied under low pressure high volume for optimum performance. Soap cannot be applied under high pressure with this machine.




For use with pressure washer detergent only.

PRESSURE TIP	PRESSURE TIP APPLICATION
 0°	Red -Stream nozzle (0°) The Red 0 degree tip provides a straight line of spray. It provides the highest amount of pressure. It is best used for removing hard, stuck-on grime or dirt.
 25°	Green - Narrow fan tip (25°) The Green pressure washer tip provides high versatility with its 25 degree angle tip. Referred to as the washing tip, because it provides adequate pressure to remove dirt from surfaces, but is designed to not damage many surfaces. This pressure washer tip is designed for "sweeping" foliage or debris given its wide angle. This tip is versatile due to its wide area of cleaning and strong pressure application.
 40°	White - Wide fan tip (40°) The white 40 degree tip, referred to as the "fan" tip creates the widest area of cleaning with relatively low pressure. This pressure washer tip is best used for light or delicate cleaning applications. It is recommended for light cleaning on wood decks and other soft or delicate surfaces.

1 Operating Mode

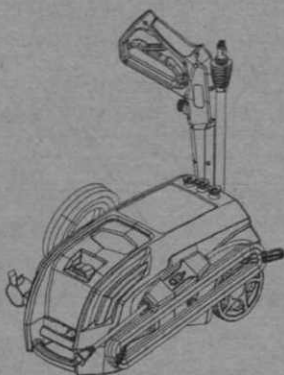


2 Transportation Mode

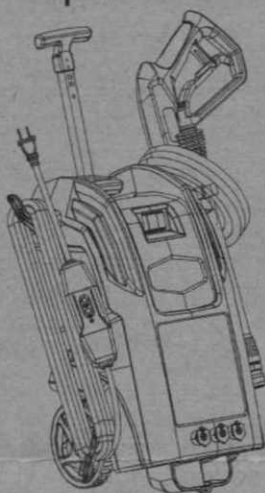

IMPORTANT: This pressure washer is not designed to be operated in an upright position as tip-over may occur.

3 Wall-Mount Mode

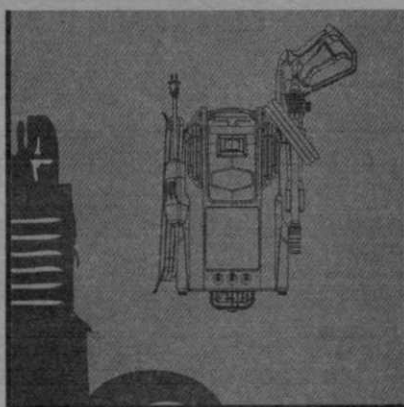

Refer to manual for mounting instructions.



Missing parts, accessories or need a service center?

Do Not Return to Store

Call : 1-888-909-6757

www.GreenWorksTools.com

Rev:01 Printed in China


Set-up

1




Connect garden hose to pressure washer water intake.


2

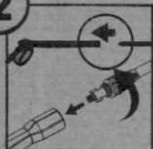

2a) Assemble pressure washer gun top half to bottom half

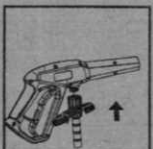

2b) Connect high pressure hose to trigger handle. Refer to manual for further details.

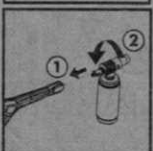

2c) Connect detergent tank to pressure washer gun.

3



Connect desired pressure tip, 0° or 25° or 40° Tip.

4




Turn on water at outlet

5



Run water hose with motor in OFF position until a steady stream of water appears. This helps drain air from tank and lines.

6

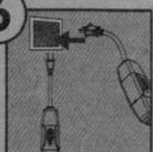

Connect power cord to wall outlet
Extension cord not recommended.

7



Turn on Pressure Washer
IMPORTANT: Ensure water outlet is On before turning power On to avoid damage to the pump.

NOTE:

AUTO ON/OFF SWITCH: This Pressure washer is equipped with an Auto Start/Stop feature.

To operate: Press power switch On (I). Pump will pressurize and shut down immediately.

Once the trigger of the gun is depressed the unit will turn on. Unit will shut off and be in standby mode when trigger is released.